


Exploded View & Parts List

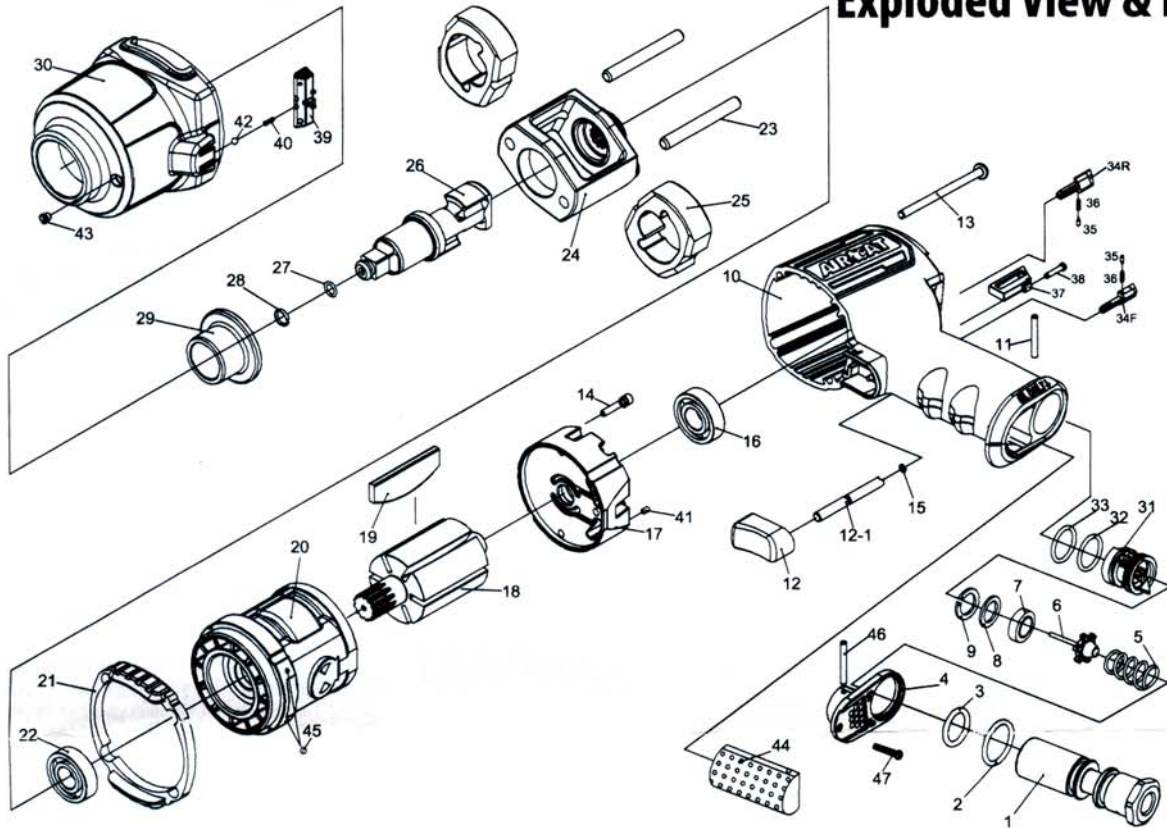

Ref #	Part Number	Description	Qty
1	9638001M	AIR INLET	1
2	90R2002	O-RING	1
3	90RAS-115	O-RING	1
4	9612805	DEFLECTOR	1
5	9638006	SPRING	1
6	9328804C	VALVE STEM	1
7	9328835	VALVE SEAT	1
8	9328835S	WASHER	1
9	9638010	RETAINER RING	1
10	96238T10-CAT	MOTOR HOUSING W/ BUSHING	1
11	9SP0328	SPRING PIN	1
12	96238T14-BK	TRIGGER	1
12-1	9621214P	TRIGGER PIN	1
13	9611213	BOLT	4
14	9611214	SCREW	3
15	90R2512	O-RING	1
16	9BR6ZZ	BALL BEARING	1
17	96238T17	END PLATE	1
18	9612830-1	ROTOR	1
19	9612831C	BLADE	6
20	9623820	CYLINDER	1
21	9623821-BK	GASKET	1
22	9B6001ZZ	BALL BEARING	1
23	9612836	HAMMER PIN	2

Ref #	Part Number	Description	Qty.
24	9612834	HAMMER FRAME	1
25	9612835	HAMMER	2
26	9612837-38	3/8" ANVIL	1
27	9328829-3	O-RING	1
28	9328830-3	SOCKET RETAINER	1
29	9612840P	BUSHING	1
30	96238T30-TI	HAMMER CASE	1
31	9621224	REVERSE VALVE	1
32	90R1802	O-RING	1
33	90R17418	O-RING	1
34F	9623829F-BK	FORWARD BUTTON	1
34R	9623829R-BK	REVERSE BUTTON	1
35	9328814	DETENT PIN	2
36	9621238	SPRING	2
37	9623828	SPACER	1
38	9633809-1	SCREW	1
39	96212T39-RD1	REGULATOR SWITCH	1
40	9SS0212	SPRING	1
41	9589040	SPRING PIN	1
42	9SB0003-1	STEEL BALL	1
43	9638047	GREASE FITTING	1
44	9612812	SILENCER	1
45	9SB0003	STEEL BALL	2
46	9612802	PIN	1
47	9612846	SCREW	1