



Ref #	Part Number	Description	Qty
1	9HS501-1A	HOUSING (AIRCAT)	1
2	9HS502	LEVER (BLACK)	1
3	9A-05	VALVE STEM	1
4	90B-04	O-RING	1
5	9HS505	BUSHING	1
6	9HS506	REGULATOR (BLACK)	1
7	90B-02	O-RING	2
8	90B-30	SNAP RING	1
9	9ST25116	PIN	1
10	9ST288316	WASHER	1
11	9ST288315	VALVE	1
12	9ST288314	SPRING	1
13	9HS513	HOSE	1
14	9HS514	MUFFLER	1
15	9HS515	AIR INLET	1
16	9HS546	WASHER	1
17	9HS547	SILENCER	1
18	90B86848	RUBBER WASHER	2
19	970410	SNAP RING	1
20	970048A	BEARING	1
21	9ST0B-19	REAR PLATE	1
22	9ST2HS-24	ROTOR	1

Ref #	Part Number	Description	Qty.
23	92HS-23	ROTOR BLADE	5
24	9ST2HG-27B	CYLINDER	1
25	9ST246014	PIN	1
26	981326	PIN	1
27	90B-24	O-RING	1
28	9ST0B-25	FRONT PLATE	1
29	90B-26A	BEARING	1
30	90B-28	WASHER	1
31	9E-29	WASHER	1
32	9SX2HS-34-1	MOTOR SHAFT BALANCER	1
33	9ST70407	ROTOR KEY	1
34	90B-30	SNAP RING	1
35	90B-101-32A	BEARING	1
38	90B-28.1	WASHER	1
39	90B-33	SNAP RING	1
40	9S560-34	SHAFT	1
41	9HS541	HOUSING COVER	1
42	90B-36	SCREW	4
43	9HS543	SHROUD	1
44	5436	PSA PAD 6 in. (AIRCAT)	1
45	90B-39-22	STOP SPANNER	1